

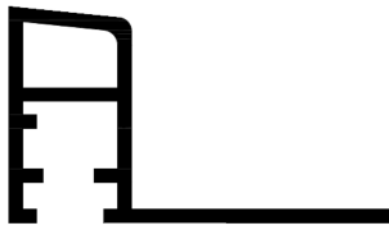


INSTALLATION METHODS

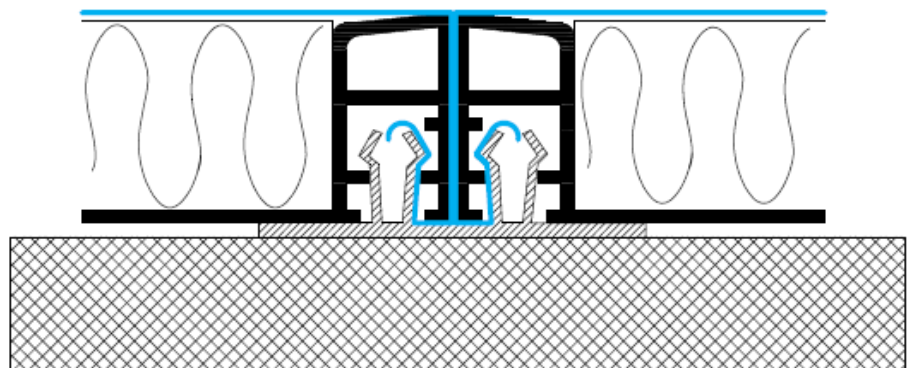

SQUARE

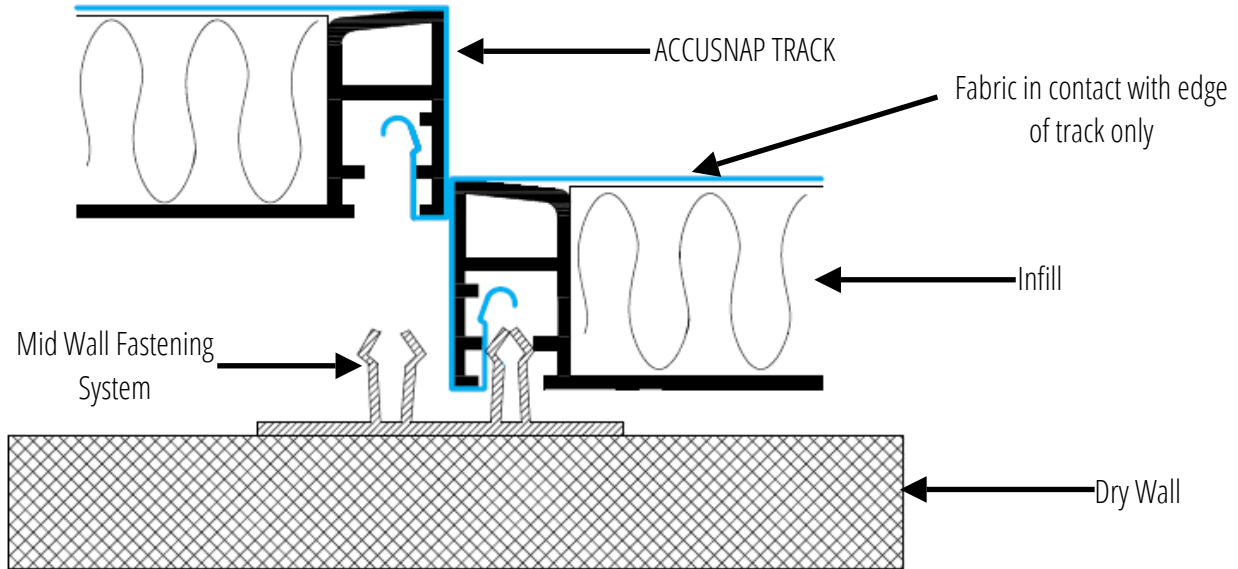

BEVEL



RADIUS